

Fig. 1

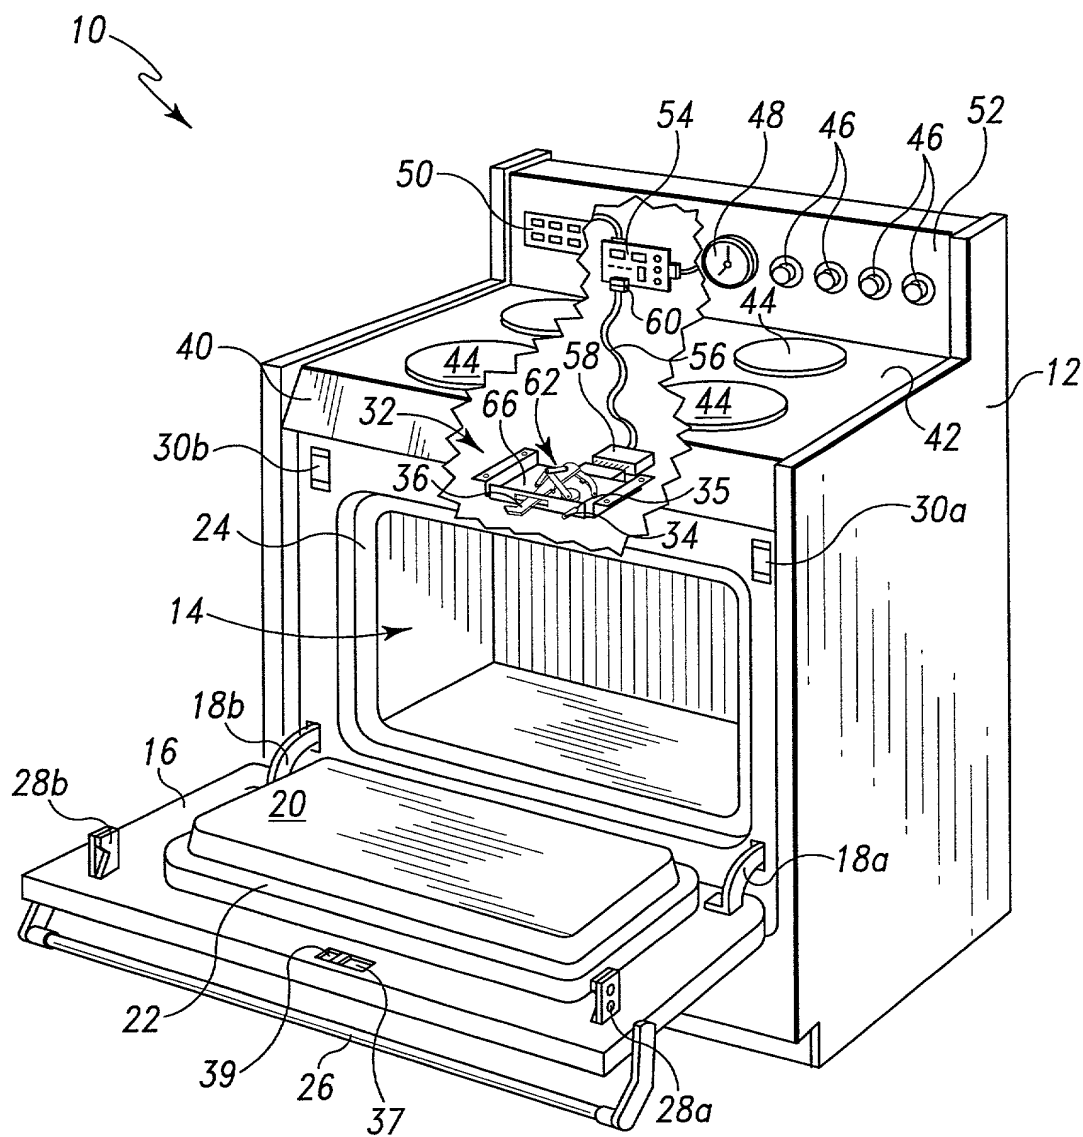 


Fig. 2

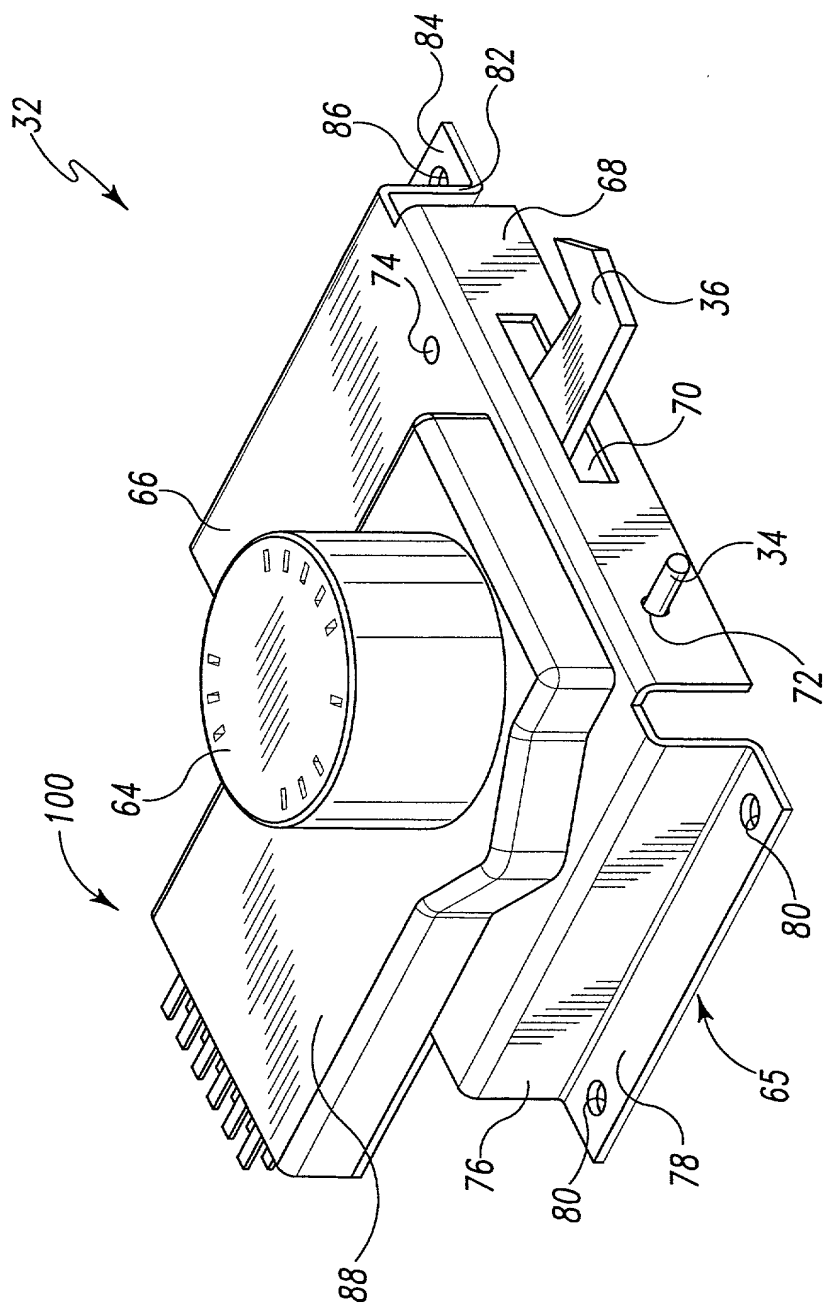 


Fig. 3

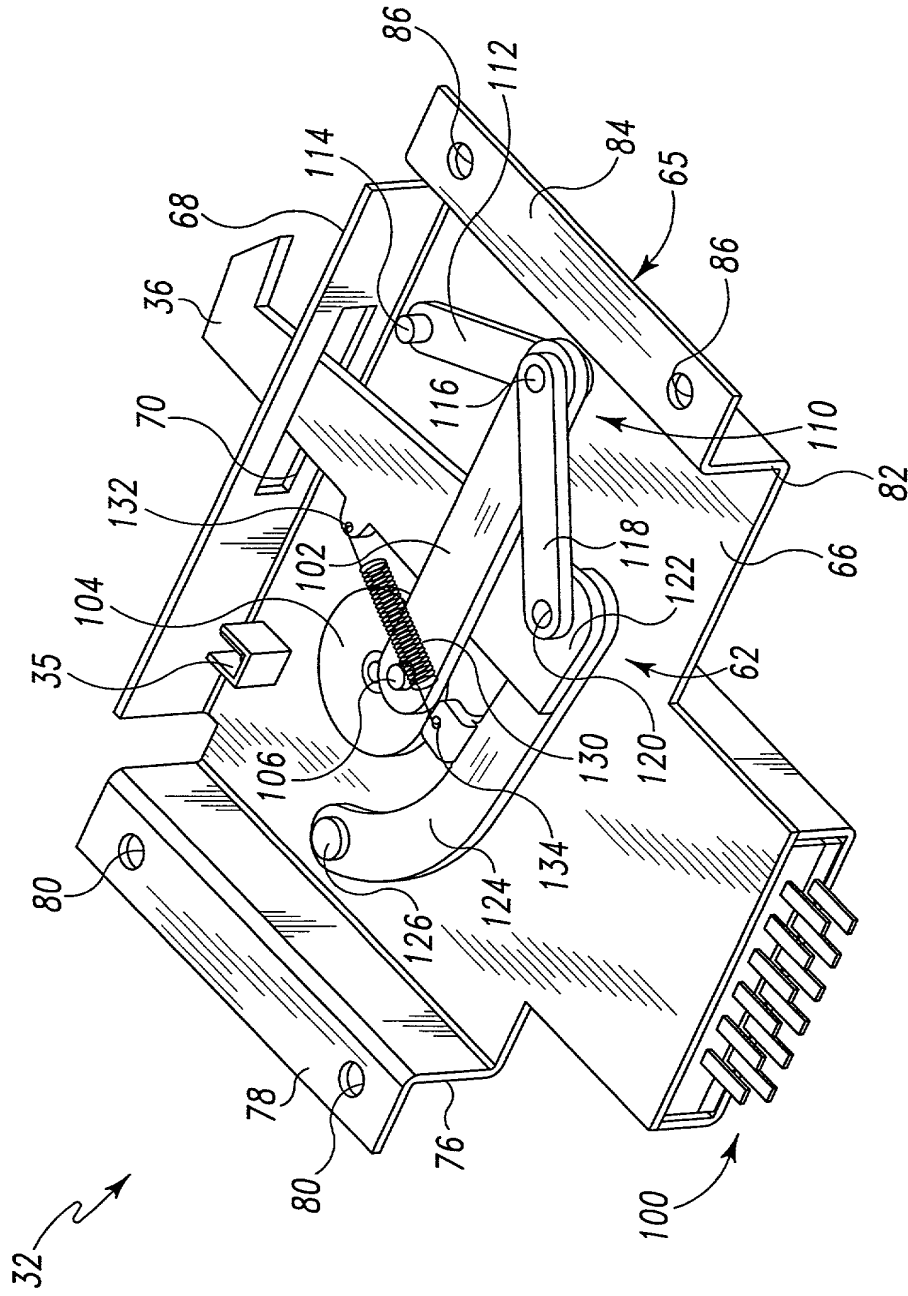 


Fig. 4



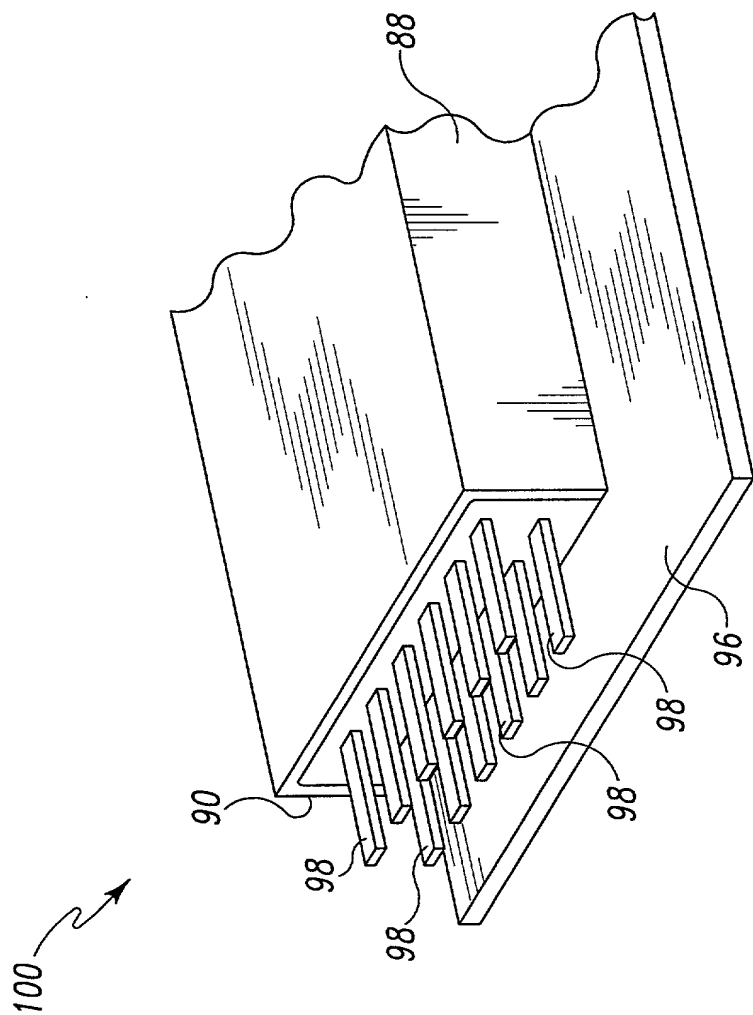 


Fig. 6

 
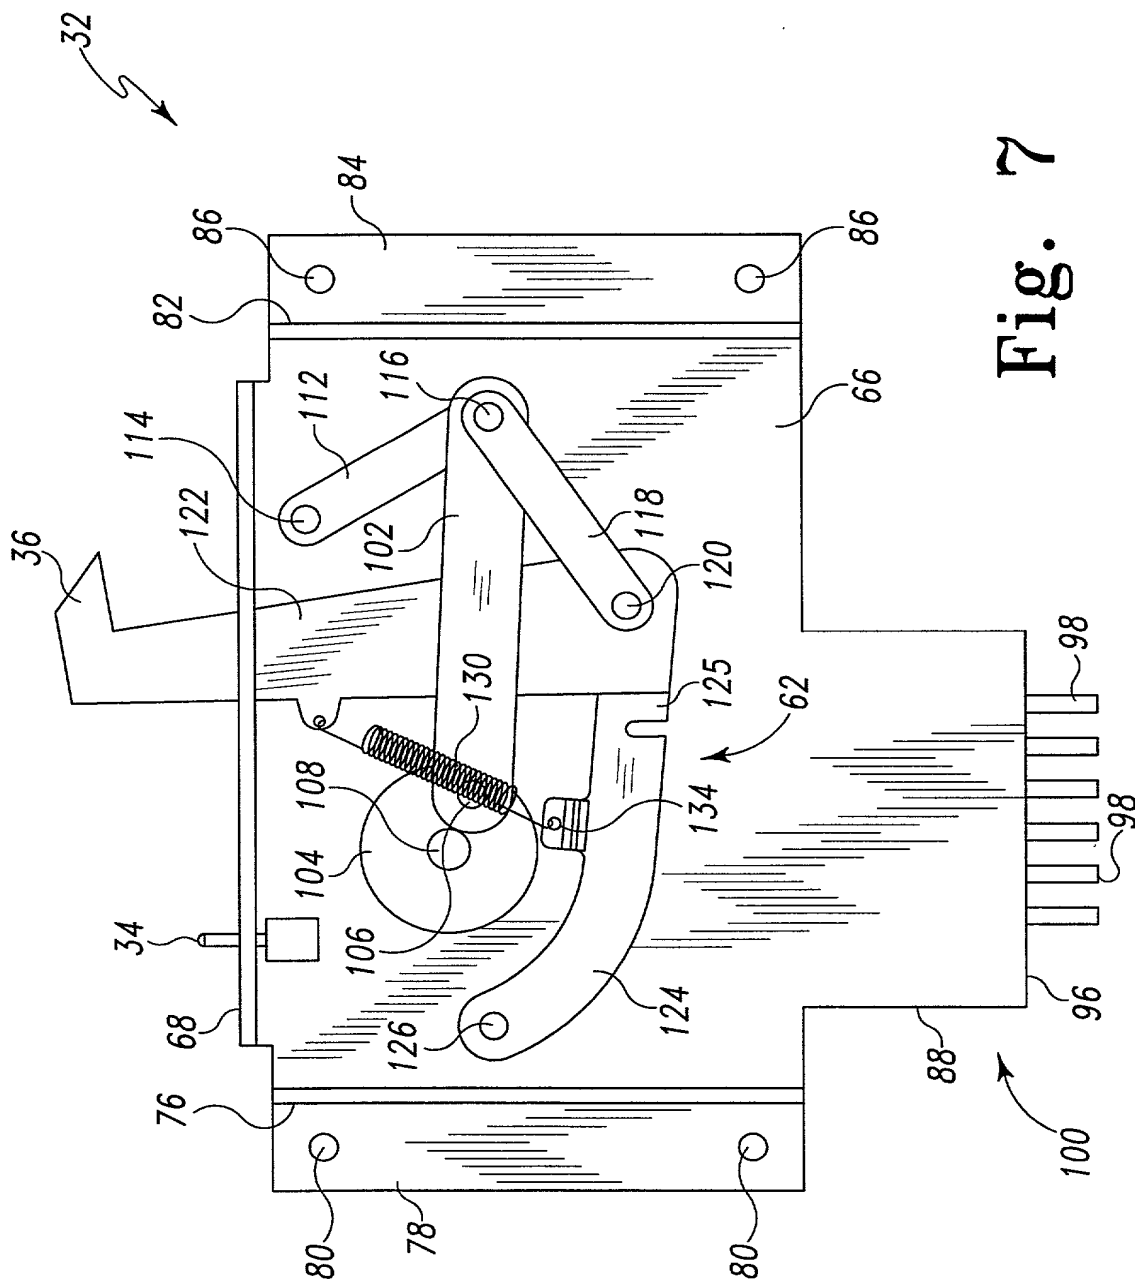 


Fig. 7

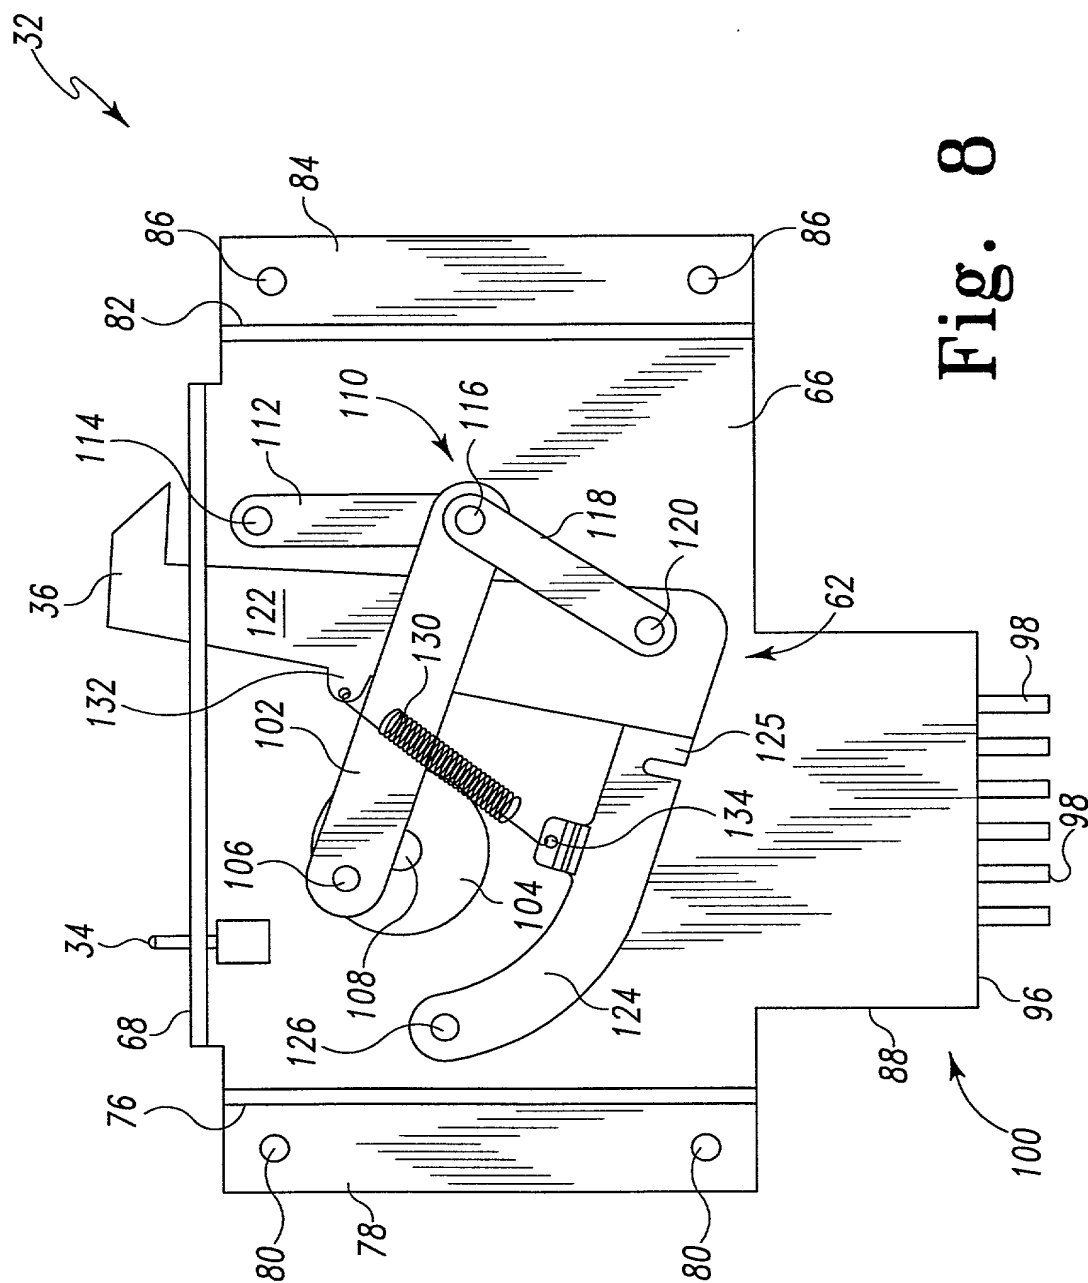

Fi. 8





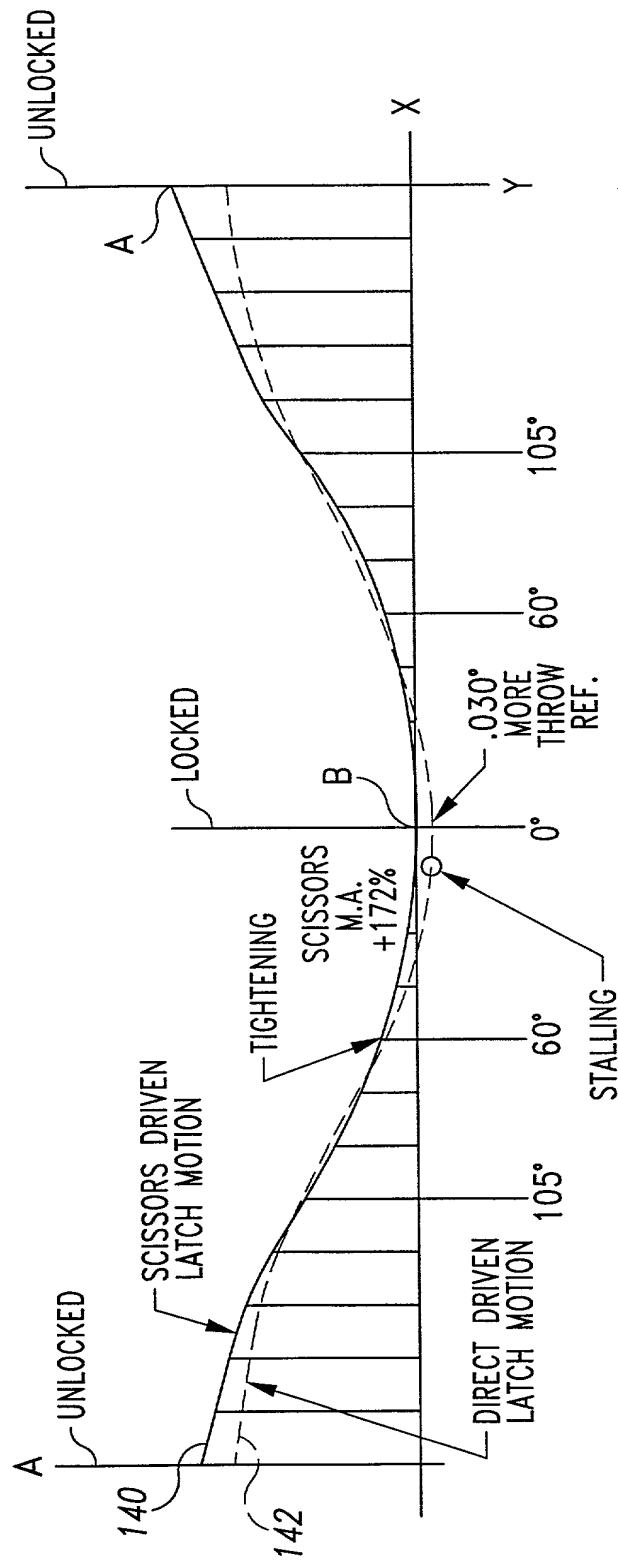 


Fig. 10

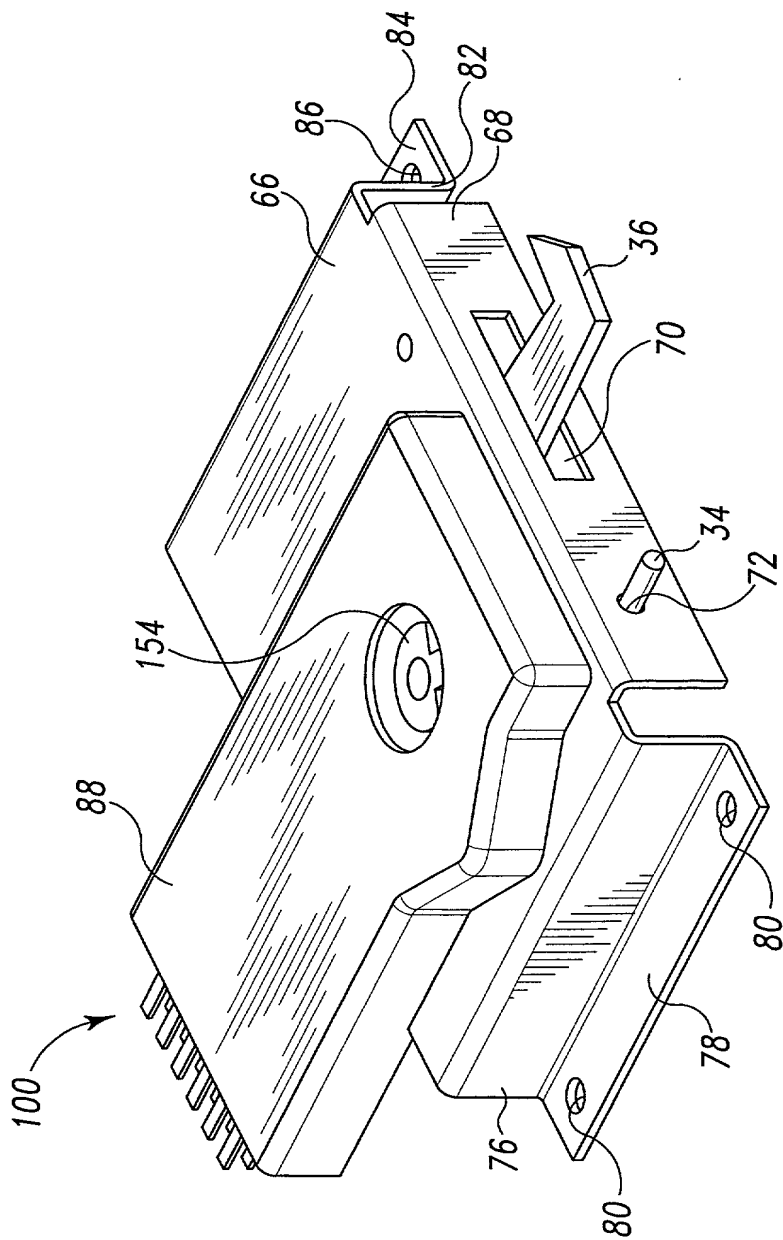 


Fig. 11

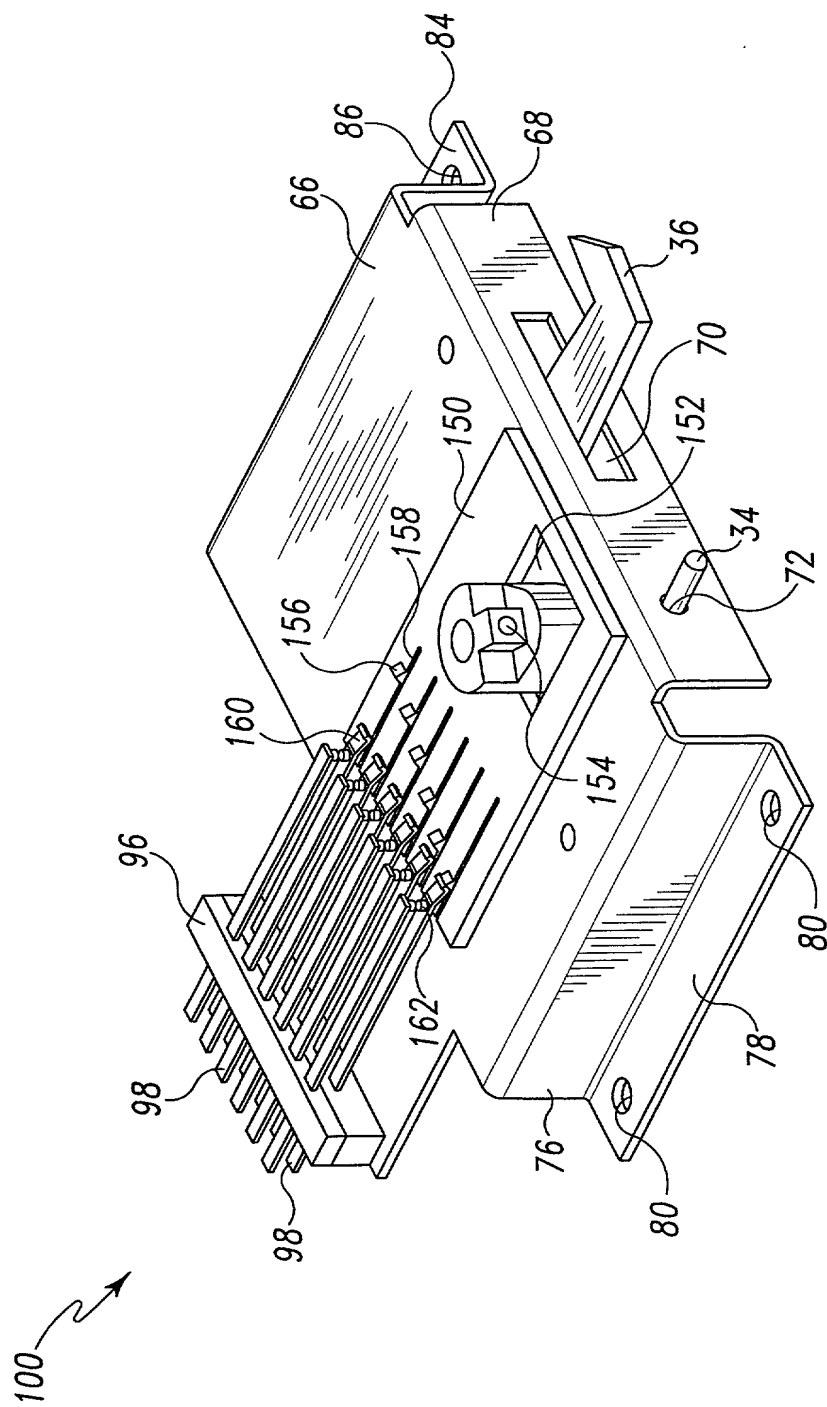 


Fig. 12



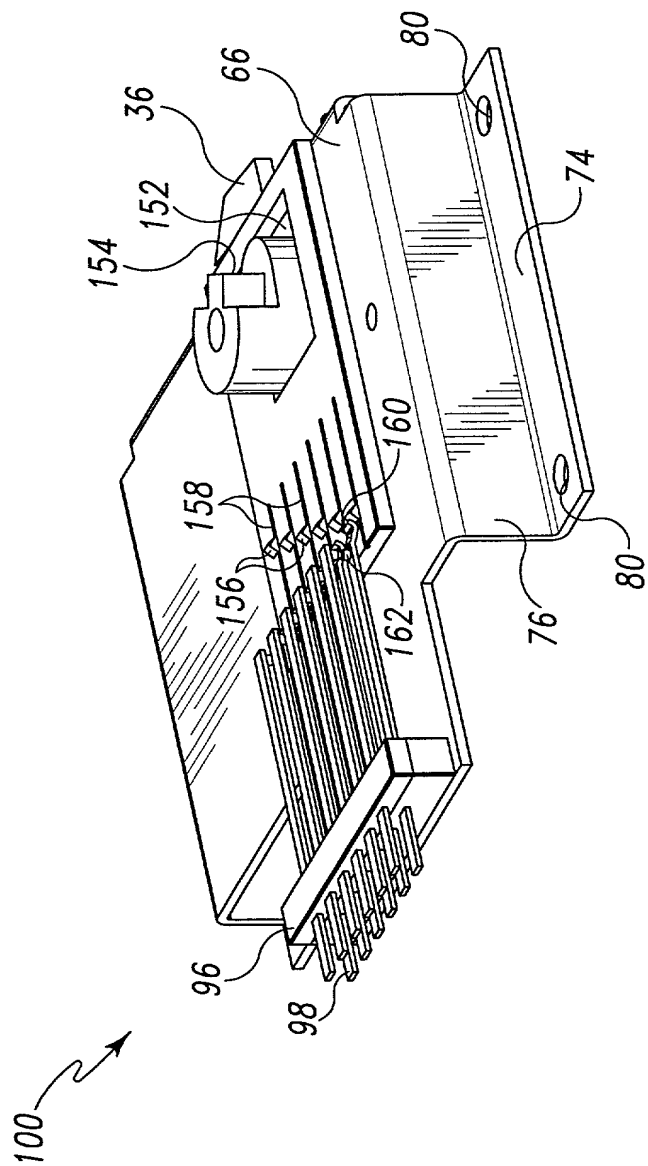 


Fig. 14

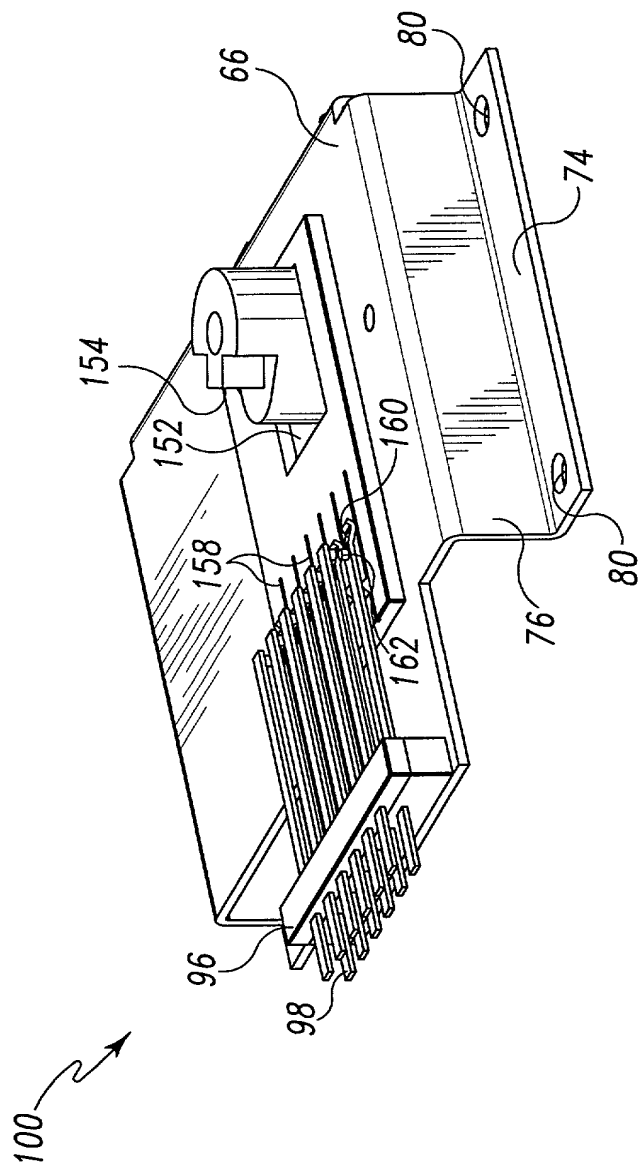 


Fig. 15

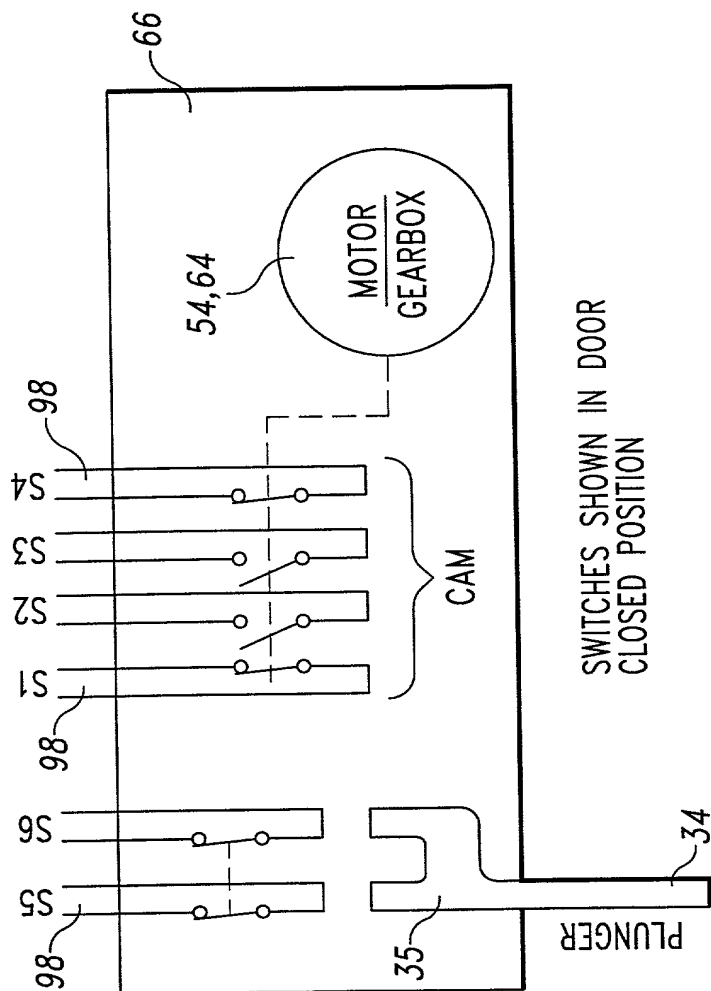 


Fig. 16



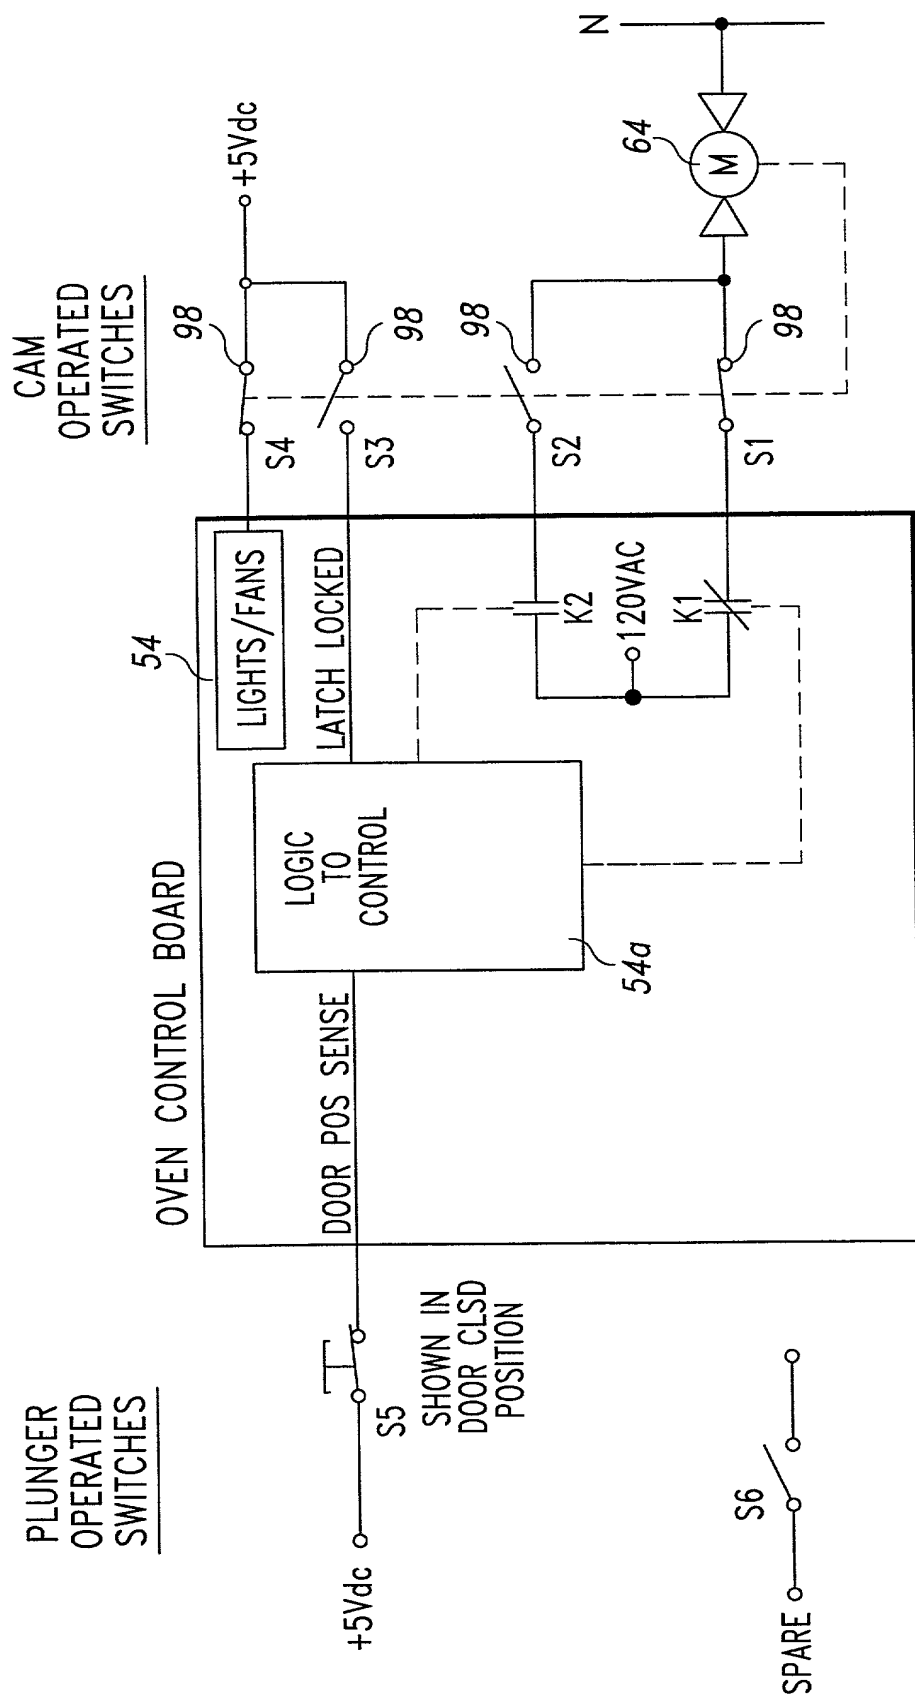 


Fig. 17

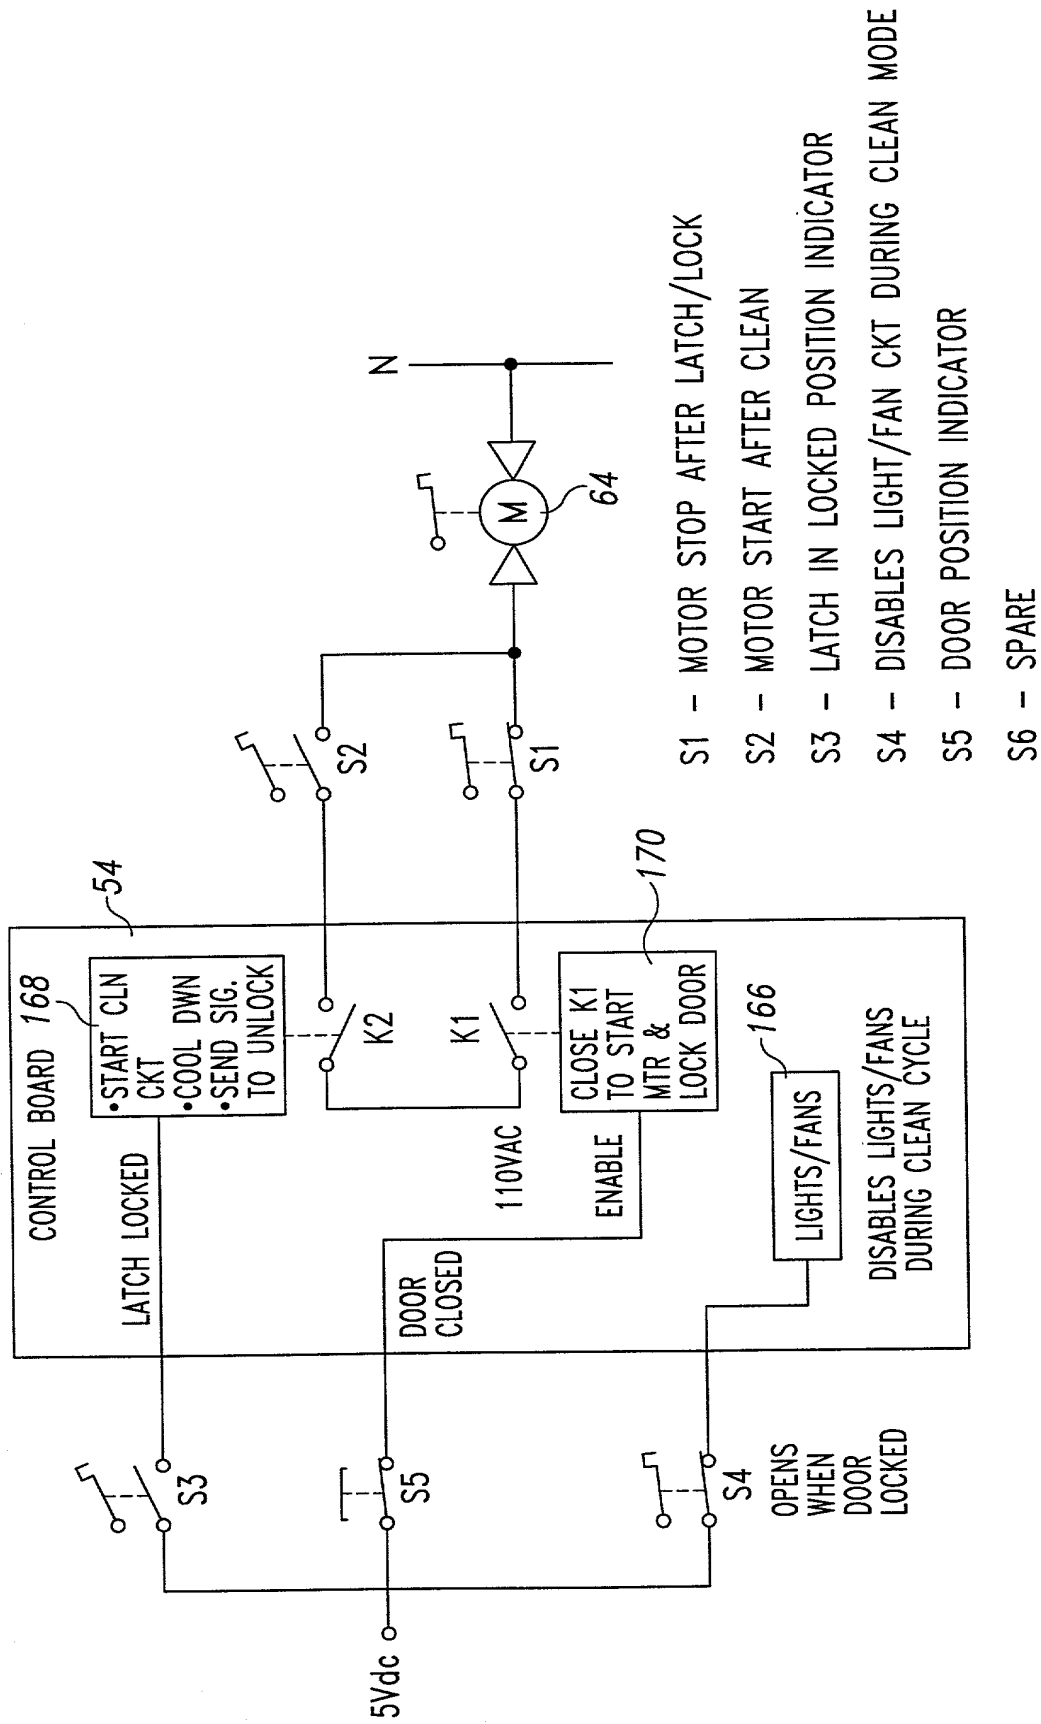 


Fig. 18

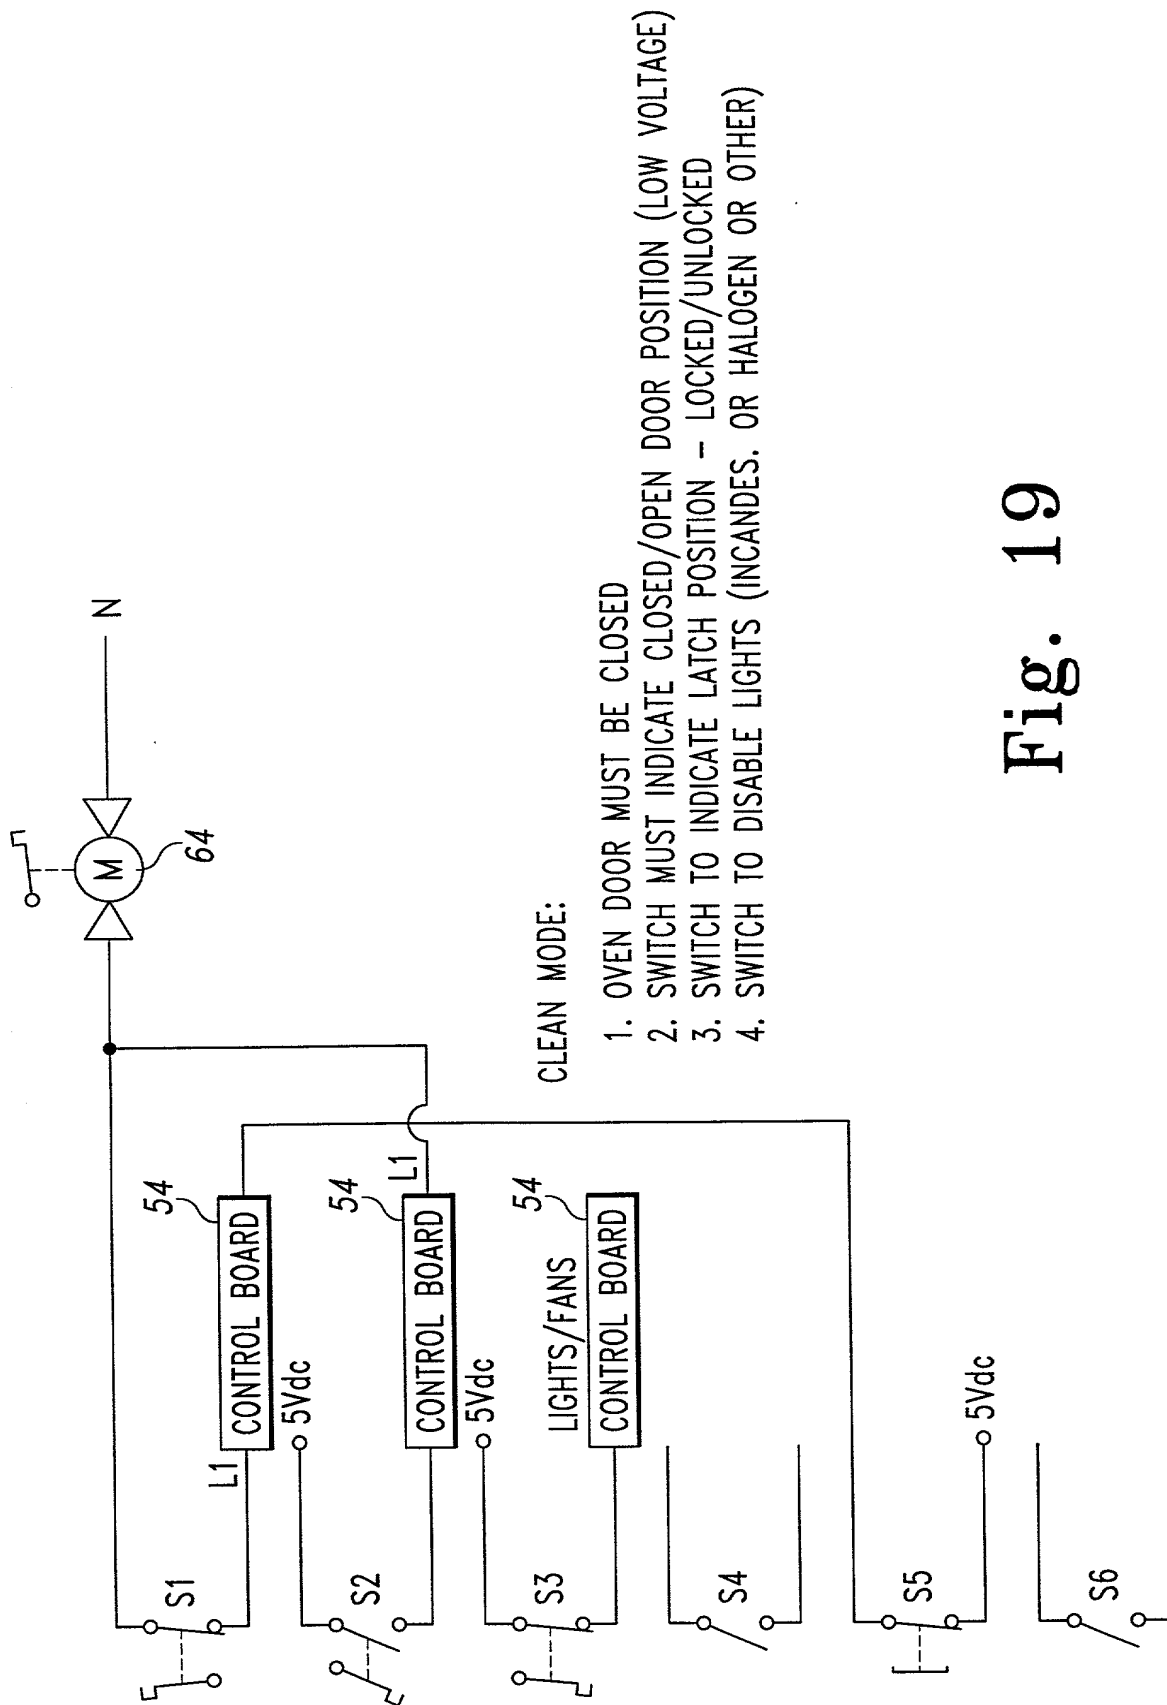 


Fig. 19

When ready upon using any type of the following, please refer to the following for more information.

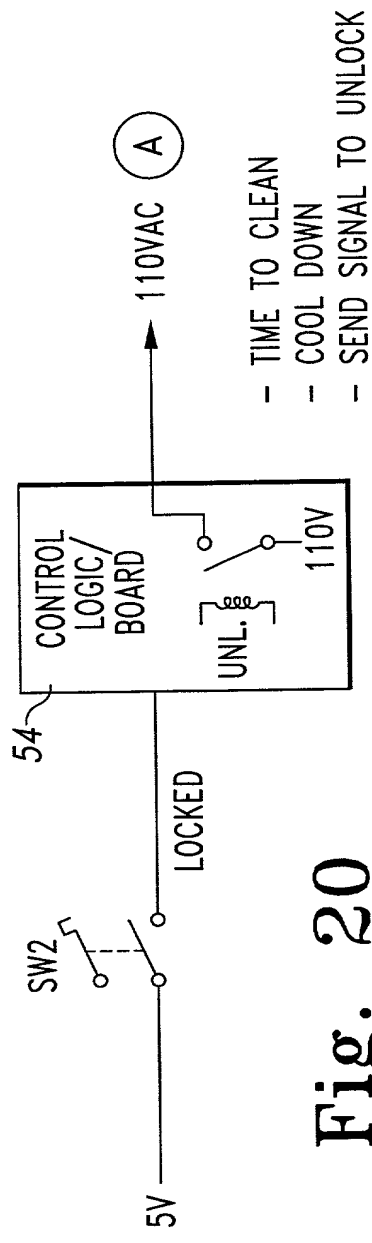 


Fig. 20

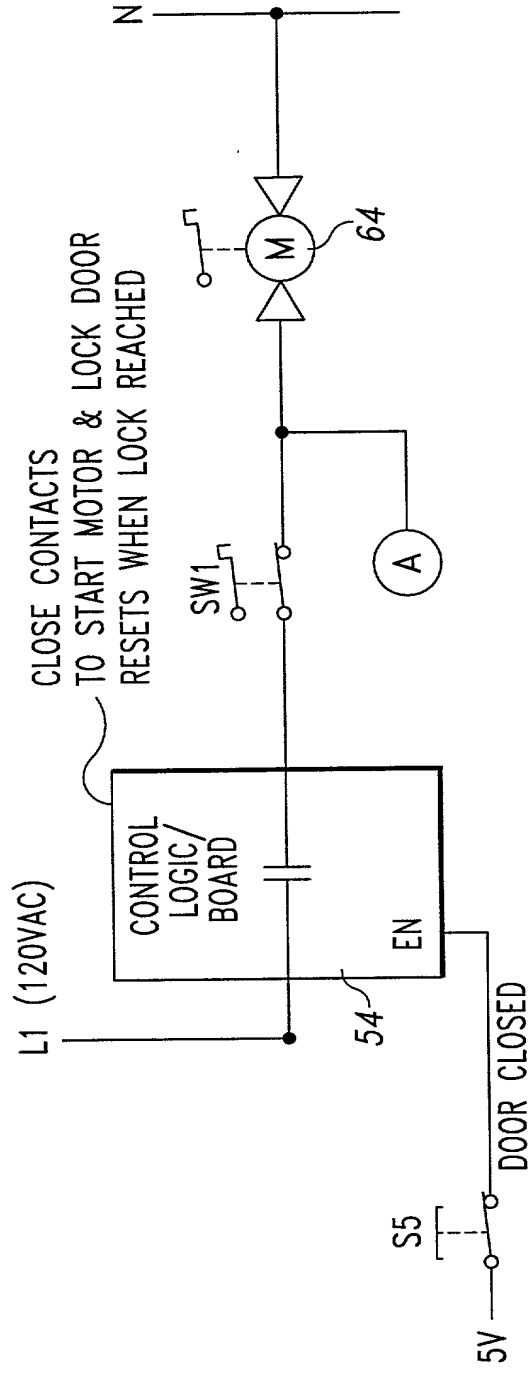 


Fig. 21

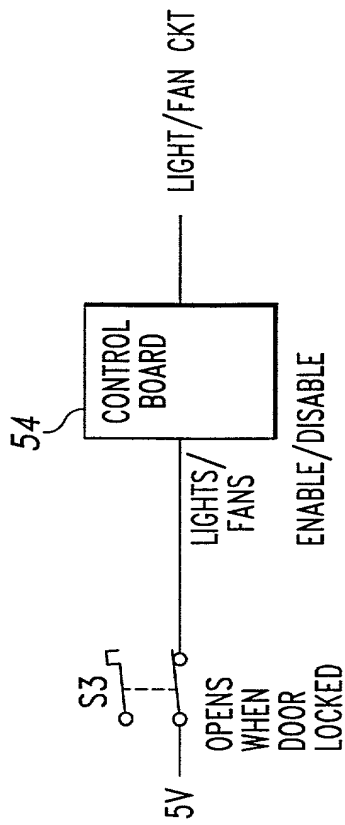 


Fig. 22

 
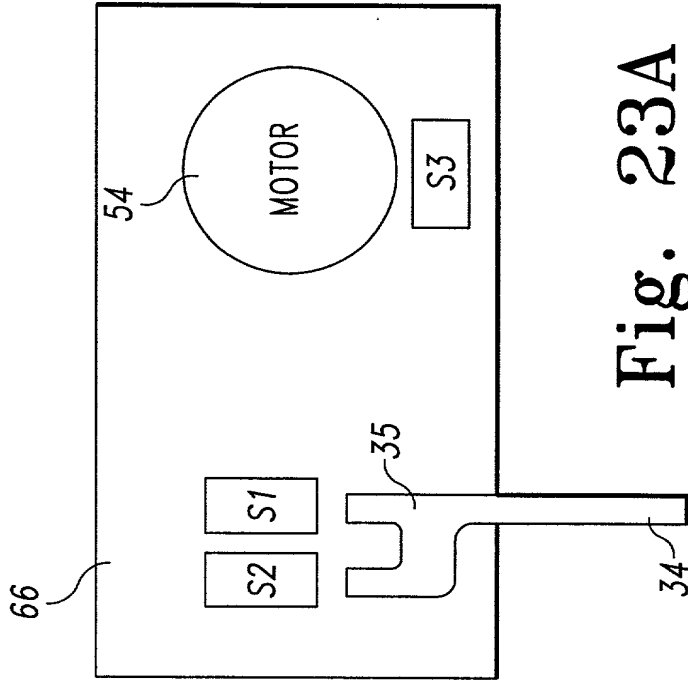 


Fig. 23A

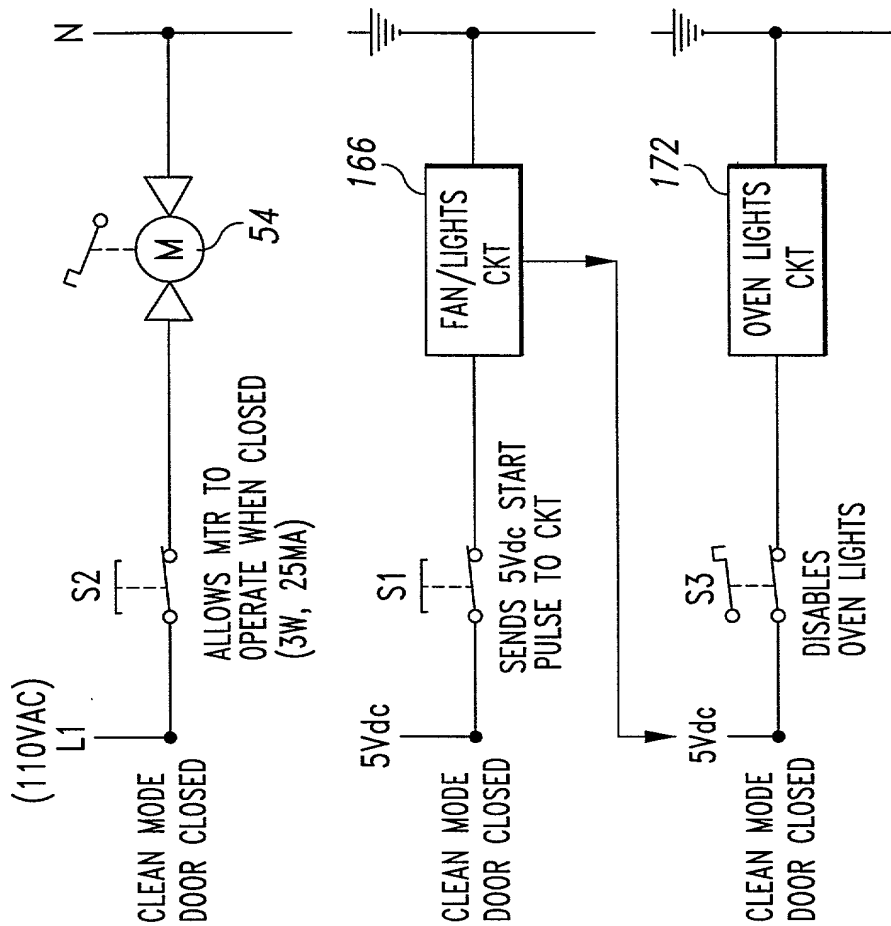

- S1 - SWITCH CONTACTS TO CLOSE WHEN  
OVEN DOOR IS CLOSED
- S2 - SWITCH CONTACTS TO CLOSE WHEN  
OVEN DOOR IS CLOSED
- S3 - SWITCH CONTACTS CLOSE WHEN  
IN LOCK (CLEAN MODE) POSITION

Fig. 23B